

# WOODSTOCK WALLS


## WOOD WALL DESIGNS

### 3D SLAT WALLS COLLECTION [Click & Stick INSTRUCTIONS](#)

1. Open box and lay out panels in the shape of the wall. (if applicable, make cuts before the start of your wall for the fastest/easiest installation).
2. Put a ¼" bead of Wood Apply adhesive in the grooves per diagram, below.
3. Apply wood panel to the wall, level. Add pressure with your hands to make sure adhesive spreads evenly. (We recommend starting at one side of the wall and working your way from left to right or vice versa. For horizontal walls, we recommend starting at the bottom and working your way upwards).
  - a. When installing the first panel, wait 20 minutes to make sure your first panel is secure before stacking the others.
4. Repeat steps 2 & 3 until your wall is complete.

(BLACK LINES ARE REFERENCE FOR ADHESIVE / VIEW FROM BACKSIDE OF PANEL)

#### Solid 3D Slat Panels with 3/4" backer

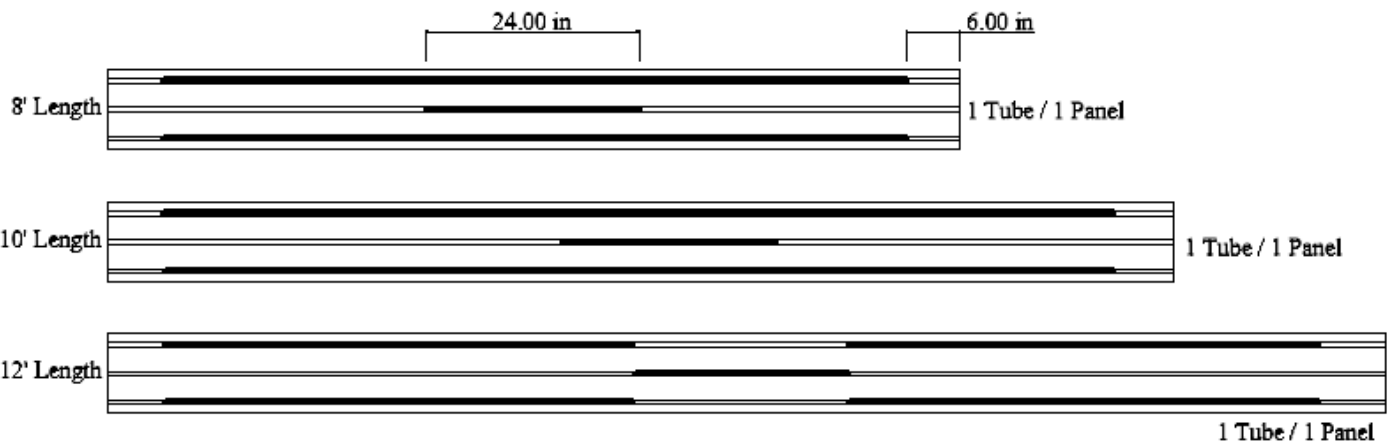

#### Acoustical Panels

