

WOODSTOCK WALLS


WOOD WALL DESIGNS

SOUTH PACIFIC COLLECTION [Click & Stick](#) INSTRUCTIONS


1. Lay out the panels in the shape of the wall (if applicable, make any cuts necessary before starting the wall)
2. Put a ¼" wide bead of our recommended adhesive in the grooves per bold black lines in the diagram, below.
3. Apply wood panel to the wall, level. Add pressure with your hands to make sure adhesive spreads evenly. (if starting at center of the wall, use a level to make a reference line).
 - a. If starting in the middle of the wall, wait 20 minutes to make sure your first plank is secure before stacking others.
4. Repeat steps 2 & 3 until your wall is complete.

(BLACK LINES ARE REFERENCE FOR ADHESIVE / VIEW FROM BACKSIDE OF PANEL)


3D Tik Tak Teak – 2 tubes/box

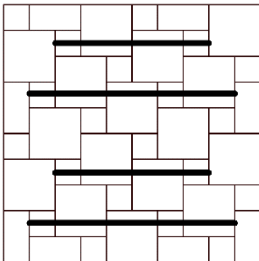


Single File – 1 tube/box

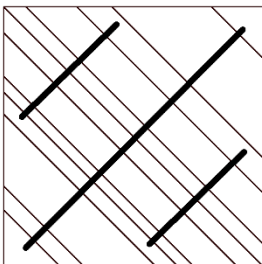


Tik Tak Teak/Tidal Wave – 1.5 tubes/box

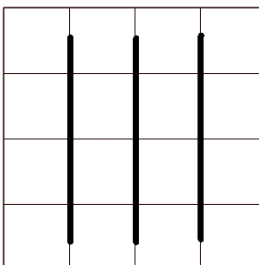


Wide Ruled – 1 tube/box

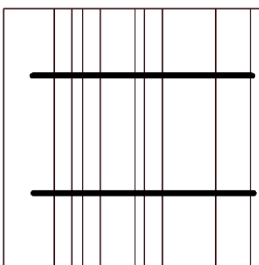

Hopscotch – 1 tube/box

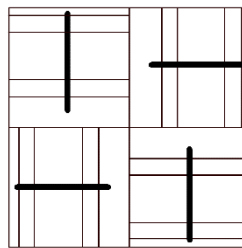

Mixed Nuts – 2 tubes/box

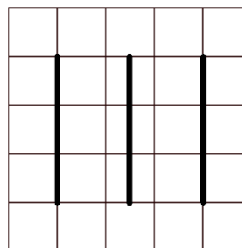


Driftwood/Twilight/Nautical/Lighthouse Large – 1 tube/box




Lighthouse Small – 1 tube/box



Stacked Flagstone Large/Lines in the Sand – 1 tube/box

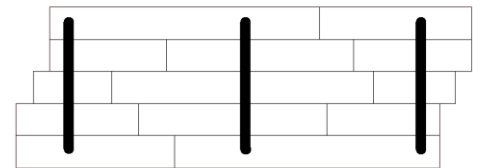

Stacked Flagstone Small – 1 tube/box

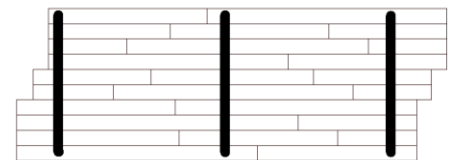

Stepping Stone - 1 tube/box

